

**T.photo 720**  
**Digital Photo Frame**  
**User's Manual**



# Table of Contents

<b>Introduction   .....</b>	<b>3</b>
<b>Package Contents   .....</b>	<b>3</b>
<b>Features   .....</b>	<b>3</b>
<b>System Requirements   .....</b>	<b>4</b>
<b>Safety Precautions   .....</b>	<b>5</b>
■ General Use .....	5
■ Cleaning .....	5
■ Backing Up Data .....	5
<b>Getting Started   .....</b>	<b>6</b>
■ Setting Up the T.photo .....	6
■ Installing the FM Antenna .....	7
■ Using a memory card or USB Flash drive .....	8
■ Volume control and headphones .....	8
■ Navigation and Menu Buttons .....	9
■ On Screen Display (OSD) .....	9
■ Remote Control .....	9
<b>Connecting to a Computer   .....</b>	<b>10</b>
■ Windows® 2000, XP and Vista™ .....	11
■ Mac® OS 10.0 or later .....	12
■ Linux® Kernel 2.4 or later .....	13
<b>The Home Menu   .....</b>	<b>14</b>
■ Photo .....	14
■ Video .....	14
■ Music .....	14
■ Radio .....	14
■ Clock and Calendar .....	14
■ Settings .....	14
<b>Photo   .....</b>	<b>15</b>
■ Thumbnail Mode .....	15
■ Photo View Mode .....	16
■ Slideshow Mode .....	18
<b>Video   .....</b>	<b>20</b>
■ Video Explorer .....	20
■ Video Player .....	21
<b>MUSIC   .....</b>	<b>22</b>
■ Music Explorer .....	22
■ Music Player .....	23
<b>Radio   .....</b>	<b>25</b>
■ Selecting a Radio Station: .....	27

■ Adjusting the Volume: .....	27
<b>Calendar   .....</b>	<b>29</b>
<b>Settings   .....</b>	<b>31</b>
<b>Troubleshooting   .....</b>	<b>37</b>
<b>Specifications   .....</b>	<b>38</b>
<b>Ordering Information   .....</b>	<b>38</b>
<b>Transcend Limited Warranty   .....</b>	<b>39</b>

## Introduction |

Congratulations on purchasing Transcend's **T.photo™**. Now you can easily display your entire photo collection at home or at the office. The T.photo includes a built-in FM radio and can conveniently playback videos, photos and music from a variety of sources: USB flash drives, memory cards, or the T.photo's own on-board memory. You can operate the T.photo by using the navigation buttons on the front of the T.photo or with its full-featured wireless remote control. The T.photo is also equipped with a rotation sensor that automatically adjusts your pictures to portrait or landscape position when you turn the T.photo. The T.photo's 2GB of built-in storage space lets you save your favorite videos, pictures and music inside T.photo for instant playback without even having to use a memory card. You can also connect the T.photo to a PC via the USB port for direct access to its internal memory or any memory cards that are plugged into it. This User's Manual will give you step-by-step instructions and advice to help you get the best experience your new device. Please read it in carefully before using the T.photo.

## Package Contents |

Upon purchasing your Transcend T.photo, please make sure each of the following is included:

- T.photo
- Remote Control (battery included)
- Tabletop Stand
- DC Power Adapter
- USB Cable
- FM Antenna Cable
- User's Manual CD
- Quick Start Guide
- Warranty Card

## Features |

- Bright 7" high-resolution widescreen color TFT LCD panel
- Built-in stereo speakers and headphone jack
- View photos with background music from MP3s or the radio
- Supports USB flash drives and microSD/SD/SDHC/MMC/MS/M2/CF memory cards
- 2GB of internal memory – works even without a memory card
- Built-in FM radio with programmable station presets
- Full Motion video playback
- Automatic rotation sensor for easy Landscape or Portrait setup
- Fully compliant with Hi-Speed USB 2.0 and backwards compatible with USB 1.1
- Direct USB connection to your PC for easy file transfers
- Select multiple photos for convenient one-step transfer to internal memory
- Slideshow, thumbnail, still picture, and zoom-in viewing options
- Attractive frame themes to accent your pictures with
- Important date/event reminder
- Clock, alarm and calendar functions

- Automatic Power-ON/OFF and Sleep timers
- Custom alarm clock settings - wake up to your favorite FM radio station or MP3 song

## **System Requirements |**

System requirements for connecting T.photo to a computer:

- 100~240V voltage power outlet for the DC adaptor
- Desktop or notebook computer with a working USB port
- One of the following Operating Systems:
  - Windows® 2000
  - Windows® XP
  - Windows Vista™
  - Mac® OS 10.0 or later
  - Linux® Kernel 2.4 or later

## Safety Precautions |

These usage and safety guidelines are **IMPORTANT!** Please follow them carefully to ensure your own personal safety and help protect your T.photo from potential damage.

### ■ General Use

- For indoor use only.
- Avoid using or storing the T.photo in an extreme temperature environment.
- Never allow the T.photo to come in contact with water or any other liquids.
- Do not use this product in environments with strong magnetic fields or excessive vibration.
- Only use the Transcend provided DC adapter with the T.photo. Use of other adapters may cause fire or explosion.
- Never cover or seal any of the holes on the T.photo.
- Unplug the T.photo if you do not plan to use it for an extended period of time. This prevents accidental damage or corrosion.
- To protect your health and your hearing, keep the T.photo's music volume below 80 decibels and do not listen for an extended period of time.


### ■ Cleaning

- The screen is very delicate and can be damaged by pressing on it with excessive force.
- Use a soft non-abrasive cloth, such as for cleaning camera lenses to gently wipe the screen

### ■ Backing Up Data


- **Transcend does NOT take any responsibility for data loss or damage during operation.** If you plan to plug a memory card or USB pen drive into T.photo, we strongly advise that you first backup the data in those storage devices to a computer or other storage medium before using them in T.photo.
- To ensure Hi-Speed USB 2.0 data transfer rates when connecting your T.photo to a computer, please check that the computer has the relevant USB drivers. If you are not sure how to check this, please consult the computer or motherboard User's Manual for USB driver information.

## Getting Started |

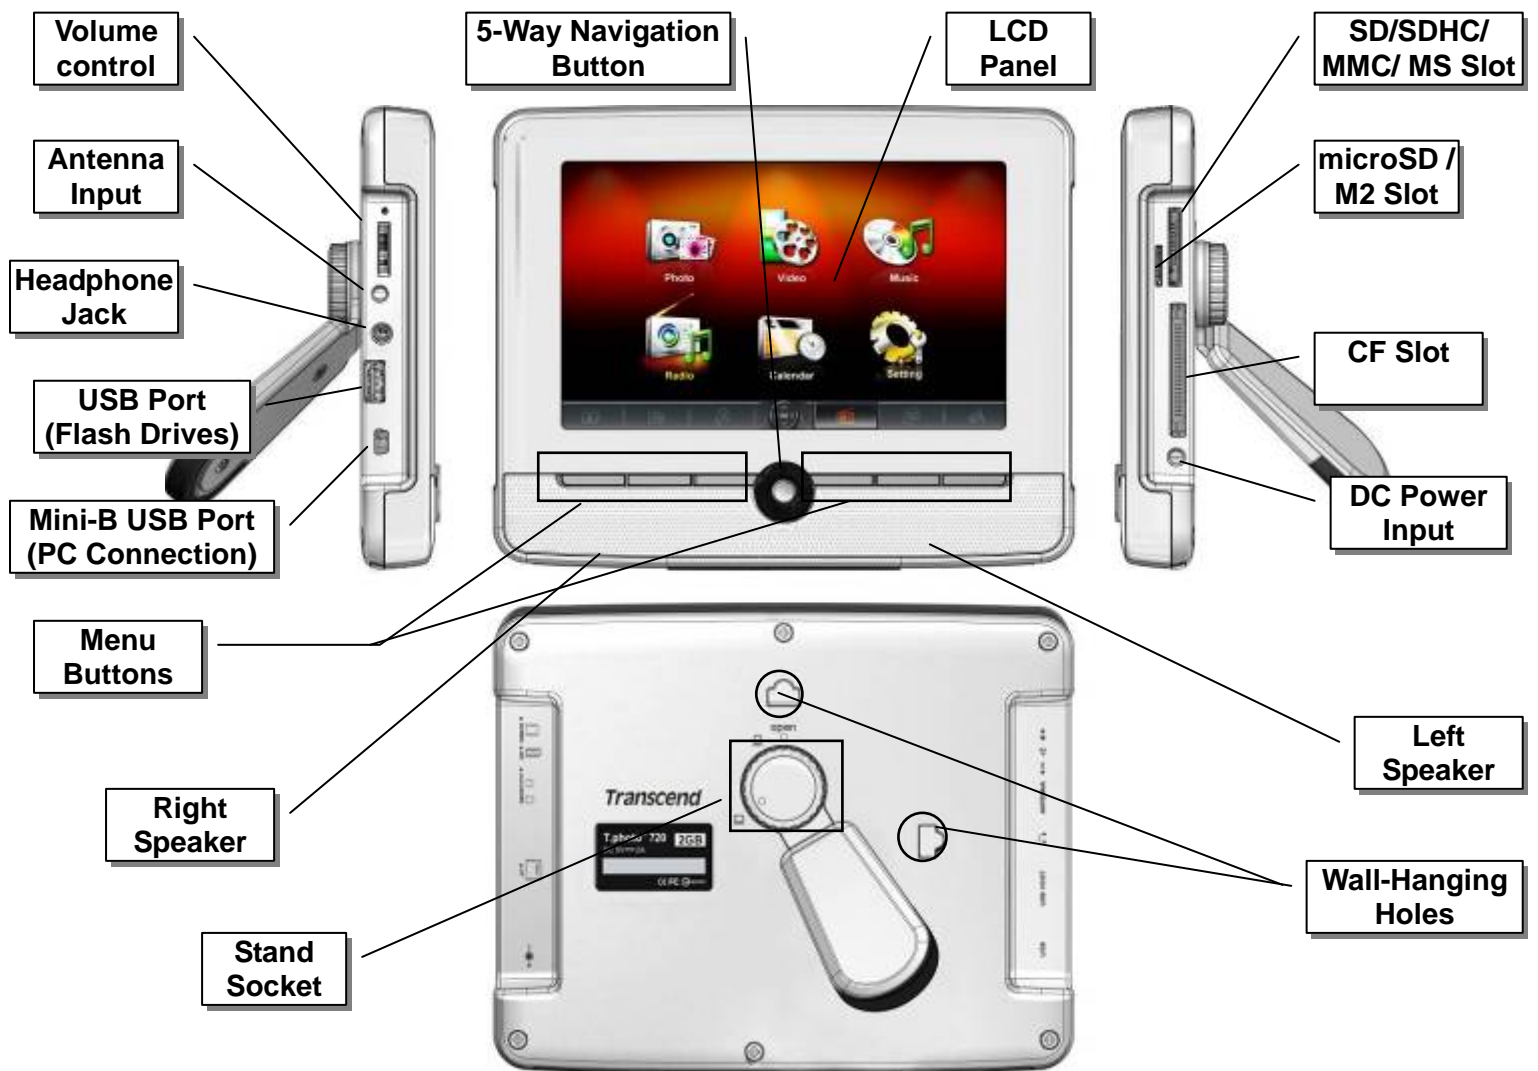


### ■ Setting Up the T.photo


1. Attach the Tabletop Stand to the circular hole on the back of the T.photo by first inserting it sideways, then turning it counter-clockwise until you reach the desired angle.
2. For Portrait orientation, turn the stand one click counter-clockwise.
3. For Horizontal orientation, turn the stand five full clicks counter-clockwise until it stops.

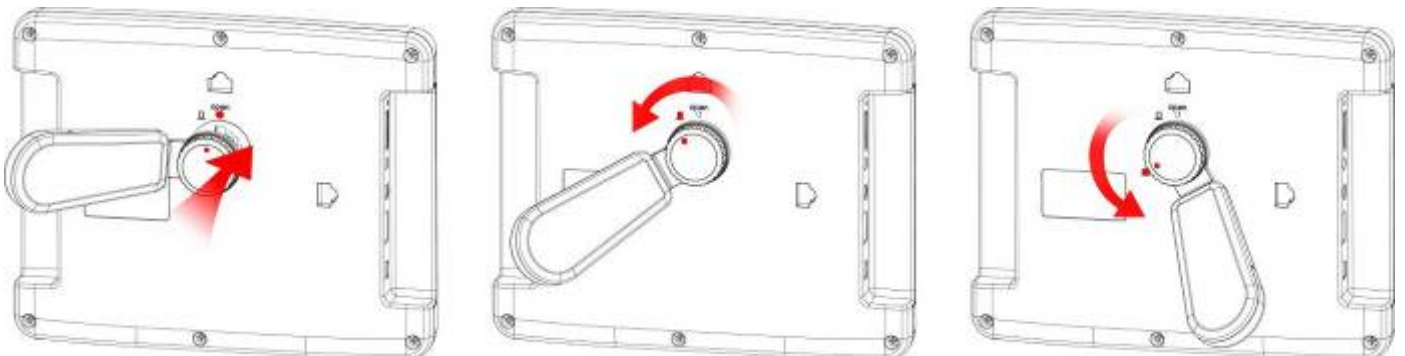

4. Connect the DC adapter cable to the DC power input jack on your T.photo.
5. Plug the DC adapter into a wall outlet.



6. The T.photo will automatically turn on. If it is already plugged in, press and hold the leftmost rectangular menu button on the T.photo for 2 seconds until it powers ON, or press  on the remote control.
7. To remove the Tabletop Stand, simply turn it clockwise until it pulls freely out of its socket.

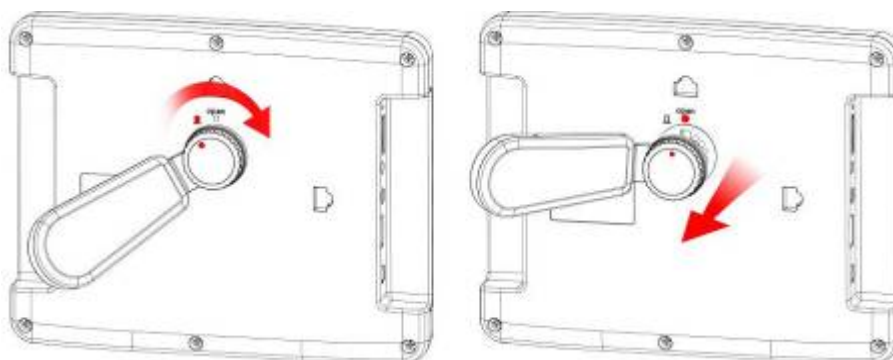

## ■ Installing the FM Antenna

If you plan on using the T.photo's FM Radio feature, you must plug in the FM Antenna to assure adequate reception quality. Plug the included FM Antenna into the small 2.5mm jack located on the left side of the T.photo.





## ■ Using a memory card or USB flash drive

1. Insert a memory card into its appropriate card slot on the right-hand side of T.photo or plug a USB flash drive to the USB port on the left-hand side.
2. Once a memory card or USB flash drive is plugged in, T.photo will automatically begin slideshow playback of all photos available on your memory card or flash drive.
3. The T.photo will revert to the Home menu if you unplug a memory card or USB flash drive while in use.



## ■ Volume control and headphones

The volume control wheel is located on the upper left side of the T.photo. Move it up to increase volume, and scroll down to decrease volume. Press inward on (click) the volume control wheel to mute. You can plug headphones into your T.photo's headphone jack to enjoy your music more personally. The built-in speakers will be disabled while headphones are plugged in.




## ■ Navigation and Menu Buttons

On the front of the T.photo, there are six convenient menu buttons and a 5-way navigation button, which are represented in this manual with capital letters (ex: **EXIT** = the menu button on the far left of the T.photo.) The central 5-way navigation button can be used for browsing through menus and selecting files, and the six menu buttons offer convenient shortcuts to certain T.photo functions. The function of each menu button varies depending on the icon displayed directly above it in the **OSD**.




## ■ On Screen Display (OSD)

The On-Screen Display menu will appear on the bottom of the screen whenever any of the menu or navigation buttons on the front of the T.photo is pressed. The OSD menu buttons offer quick and easy shortcuts to some of the functions in the Options menu of each mode. Most of these shortcuts can also be accessed with the remote control (see below). Each option is mapped to a rectangular **menu button** located directly underneath it. All icons like  shown in this User's Manual and the Quick Start Guide represent OSD menu button functions. The OSD menu will disappear after 10 seconds without button input.



## ■ Remote Control

Your T.photo comes with a compact, easy-to-use remote control. You can operate your T.photo with either the navigation and menu buttons on the front of the T.photo or by using the remote control. Note that when using the remote control you should always aim it directly at the front of your T.photo and make sure there are no obstacles in the way. All icons like  shown in this User's Manual and the Quick Start Guide represent functions that you can access directly from the remote control for easy, straightforward operation of your T.photo.




- (Music) (Video) (Radio) (Calendar) (Settings) (Home) : These modes can be directly accessed by pressing one of these shortcut buttons no matter what menu/mode the T.photo is currently in.
- : These buttons allow you to switch between **Thumbnail** and **Slideshow** modes.
- : Select the item you want to view or function you want to perform.
- : Shows additional functions available for the current mode.
- : Display the next or previous page of available items
- : Go back to the last page or menu.
- : Add or delete the current photo, video, or music file from the T.photo's internal memory.
- : Browse the contents of the T.photo's internal memory (My Favorites)
- : Play/pause, or stop music at any time.
- : Skip to the next or previous available music track or video clip.
- : Adjust music volume (up / down / mute).
- : Cycle between music and video repeat modes.
- : Rotate or zoom-in on photos displayed in **Photo View** mode.
- : Change the brightness of the screen.
- : Enable the sleep timer to automatically shut down the T.photo.

## Connecting to a Computer |

If you want to transfer pictures and music between the T.photo and your computer, connect the T.photo to a USB port on your computer using the provided USB cable.

1. Turn on the T.photo.
2. Plug the small end of the USB cable into the Mini-B USB port located on the left side of the T.photo.

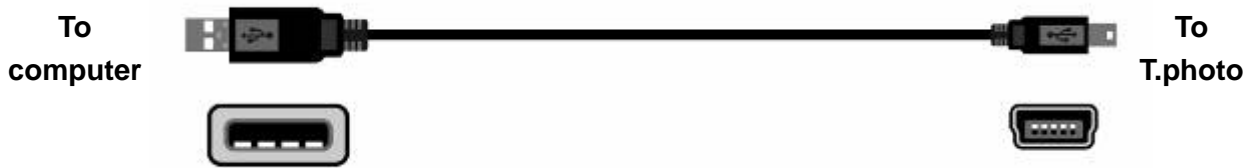


3. Plug the large end of the cable into an available USB port on your desktop or notebook computer.



**WARNING!** You must plug in the DC adapter to provide the power necessary to run the T.photo when connecting to a computer.




## ■ Windows® 2000, XP and Vista™

No drivers are required for connecting T.photo to your desktop or notebook computer. Windows® Operating Systems have built-in drivers to support your T.photo. Upon successful connection to your computer, a new **Removable Disk** drive with a newly assigned drive letter representing the T.photo will automatically appear in the **My Computer** window and a Removable Hardware  icon will appear in the Windows System Tray.




Your T.photo is now ready to transfer data just like an external hard drive. A number of **Removable Disk\*** drives with newly assigned drive letters representing the T.photo's card slots (and its onboard memory) will appear in the **My Computer** window. You can transfer your pictures and music to the T.photo by simply dragging-and-dropping files or folders onto these **Removable Disk** drive letters.

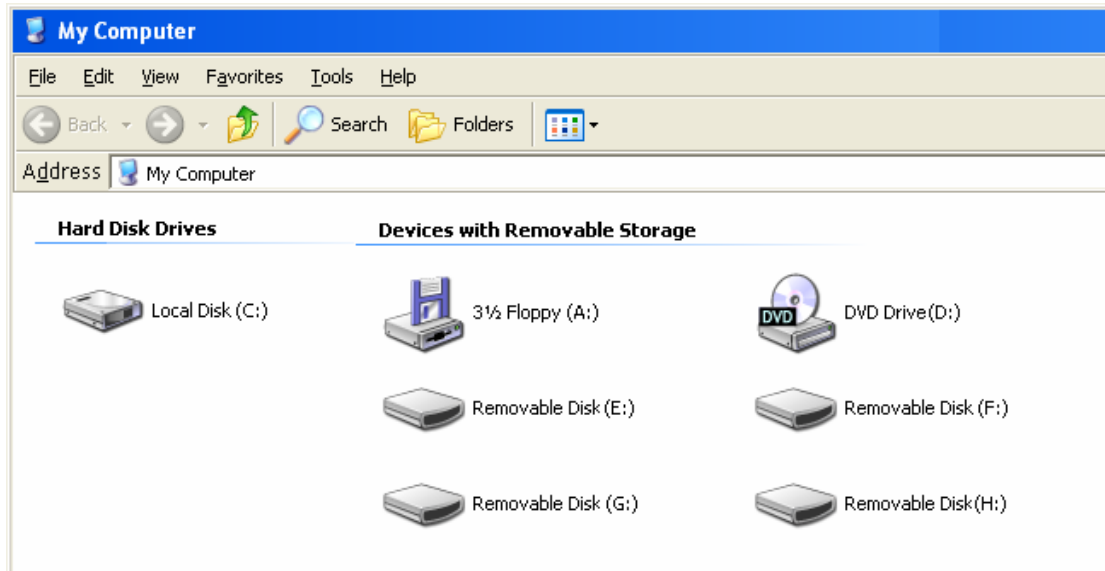

\*Note: E:,F:,G:, and H: are example drive letters - the letters in your “My Computer” window may differ

### Proper removal of your T.photo (from Windows):

1. Click once on the **Removable Hardware** icon  in the system tray.
2. The **Safely Remove Hardware** pop-up window will appear. Select it to continue.



3. A window will appear stating, “The ‘USB Mass Storage Device’ device can now be safely removed from the system.” Unplug your T.photo from the USB port after this message appears.



### ■ Mac® OS 10.0 or later

No drivers are required. Plug your T.photo into an available USB port and your computer will automatically detect it.



### Proper removal of your T.photo (from Mac OS):

First drag-and-drop the Disk icon corresponding to your T.photo into the trashcan then unplug your T.photo

from the USB port.

## ■ Linux® Kernel 2.4 or later

No drivers are required. Plug your T.photo into a USB port and mount it.

1. First create a directory for the T.photo.

Example: `mkdir /mnt / T.photo`

2. Then, mount the **T.photo**.

Example: `mount -a -t msdos /dev/sda1 /mnt / T.photo`

### Proper removal of your T.photo (from Linux):

Execute **umount /mnt/ T.photo** to un-mount the device. Then unplug your T.photo from the USB port.



1. **WARNING!** To prevent data loss, always follow the proper removal procedures when disconnecting the T.photo from your computer
2. When T.photo is connected to a computer, it can only be used for transferring files. You will not be able to use any of the T.photo's audio or video at this time. Please disconnect your T.photo from the computer to resume normal viewing or listening.
3. The USB flash drive port will not function while the T.photo is connected to your computer via the Mini-USB port.
4. NEVER format your T.photo.




## The Home Menu |


The **Home** menu acts as a convenient gateway to access all of T.photo's functions. Use the **UP / DOWN / LEFT / RIGHT** buttons to select one of the six icons listed in Home menu (shown below) and press **OK**.




### ■ Photo

This option lets you display photos in Thumbnail, Photo view or slideshow mode with special effects. You can also copy multiple photos to and from the internal memory in this mode. Use the OSD to select the "Photo" icon or press  to enter the Thumbnail mode directly.


### ■ Video

The convenient Video function lets you use your T.photo to playback your favorite movies, music videos, home movies, and more. Use the OSD to select the "Video" icon or press  to open the Music Explorer.


### ■ Music

By selecting the Music option, you can playback music on your T.photo, and even choose your favorite song to wake you up in the morning as your alarm clock sound. Use the OSD to select the "Music" icon or press  to open the Music Explorer.


### ■ Radio

T.photo also features a built-in FM radio tuner. By selecting the "Radio" option or pressing  on the remote, you can program and listen to your favorite radio stations while viewing your photos at the same time.

### ■ Clock and Calendar

The Clock and Calendar option turns your T.photo into an attractive desk clock/calendar with pictures. In this mode you can mark important dates and holidays, and even choose a festive theme to go with them (i.e. a heart theme for Valentine's Day). Use the OSD to select "Clock and Calendar" or press .

### ■ Settings

This option allows you to adjust the T.photo's numerous settings, such as switching languages or setting the clock. Use the OSD to select the "Settings" icon or press  to enter this menu option.

## Photo |


The **Photo** function has three modes: (**Thumbnail** mode, **Photo View** mode and **Slideshow** mode). You can use the remote control to access these modes directly or navigate to them using the OSD.

### ■ Thumbnail Mode


Select **Photo** from the Home menu or press  to enter this mode. The **Thumbnail** Mode allows you to browse thumbnails of all photos in the current source (memory card, USB flash drive, etc.). 24 thumbnails per page will be displayed. Use the **UP**, **DOWN**, **LEFT** and **RIGHT** buttons to navigate to the thumbnail you want to view, then press  to view the selected photo in **Photo View** mode.







### Switching to Photo View mode:

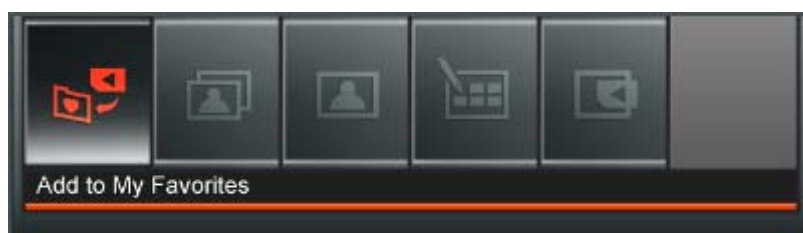1. Navigate to the photo you want to view by using the **UP**, **DOWN**, **LEFT** and **RIGHT** buttons.
2. Press  to view the selected image in **Photo View** mode.

### Options:



This menu shows list of options available in the **Thumbnail** mode. Some of these options are available on the remote or by using the menu buttons on the front of the T.photo.

1. Press the  button.
2. Use the **LEFT** and **RIGHT** buttons to highlight the desired menu option and press .
3. Sub-menu items can also be selected with the **LEFT** and **RIGHT** buttons.
4. Press  once to go back to the previous screen.
5. Press  again to revert to the **Home** menu.





**Add to / Remove from My Favorites (±♥):** Copy the currently selected photo in the Thumbnail viewer to the T.photo's internal memory (when the viewing source is a memory card or USB flash drive). To remove a photo from the internal memory, select "My Favorites" as the viewing source, navigate to the desired thumbnail to remove, and then choose "Remove from My Favorites."



**Slideshow (SLIDE SHOW):** Switch to Slideshow mode.



**Photo View:** Switch to Photo View mode.



**Select Multiple Photos:** This option lets you select multiple photos to copy to the T.photo's internal memory. 24 thumbnails with check boxes will be displayed per page. Use the **UP**, **DOWN**, **LEFT** and **RIGHT** buttons to move between images and press **OK** to check/uncheck individual photos.



- **Select All:** Select all items in current media source.
- **Deselect All:** Deselect all items in current media source.
- **Select All On Page:** Select all items on current page.
- **Deselect All On Page:** Deselect all items on current page.
- **Select Inverse:** Select all un-selected items, and deselect all selected items.
- **Slideshow of Selected Photos:** Start a slideshow with currently selected photos.
- **Add to / Remove from My Favorites (±♥):** Copy the currently selected photo(s) to or remove from the T.photo's internal memory. Note: the "Remove" option will be shown when the viewing source is set to "My Favorites."



**Select Source:** Change the media source to browse thumbnails from. Use **LEFT** and **RIGHT** to select one of the available storage devices and press **OK**.

## ■ Photo View Mode


You can view, zoom-in, or rotate a single photo in **Photo View** mode. Use the **LEFT** and **RIGHT** buttons to view the next or previous photo available.



### Switching to Slideshow mode:

Press **OK** at any time while viewing a photo to switch to **Slideshow** mode.

### Options:

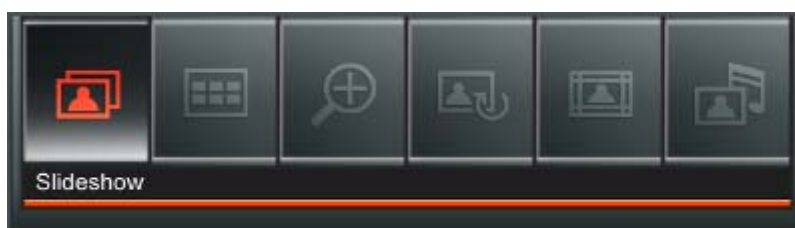

This menu shows list of options available in the **Photo View** mode. Some of these options are available on the remote or by using the menu buttons on the front of the T.photo.

1. Press and use **LEFT** and **RIGHT** to highlight the desired menu option.
2. Press **OK** to access the highlighted function or open its sub-menu.
3. Press once to go back to the previous screen.
4. Press again to revert to the **Home** menu.



**Slideshow:** Select this menu option or just press **SLIDE SHOW** on the remote to enter Slideshow mode.



**Thumbnail:** Select this item or press on the remote to enter Thumbnail mode.



**Zoom:** Select this item to choose between x1, x2 and x4 zoom modes in the Zoom submenu. You can also press on the remote to automatically zoom-in on the current photo. You can go back to **Photo View** mode by pressing .



**Rotate:** Select this item and choose between clockwise 90°, 180° and 270° in the Rotate submenu. Pressing will rotate the current photo clockwise 90° each time you press it. (Rotate function

only enabled at x1 zoom)



**Themes:** This option brings up a submenu that lets you select theme frames to wrap around your photos while viewing in Slideshow or Photo View. Use the **LEFT** or **RIGHT** buttons to highlight None, X-mas, Halloween, Valentine's Day or New Year, then press **OK** to confirm.



**Background Music:** Enable or disable background music while viewing photos.

- **On (Music):** Turn on mp3 music. The T.photo will automatically find and play music files on the same memory device that is being used to display photos. Playback settings (repeat, EQ, etc.) applied in MUSIC mode will be used. Use **⏮**/**⏭** on the remote to skip through available songs. If there are no music files on the current storage media, no music will be played.
- **On (Radio):** Turn on the FM radio. The T.photo will either use the saved radio station last listened to in RADIO mode or the first available FM frequency. Skip through saved stations by pressing **⏮**/**⏭** on the remote.
- **Off:** Turn off all background music



**Set as Background Image:** Use the current photo as a wallpaper image in **Clock and Calendar** mode, **Music Player** mode and **Radio** mode (will also copy the picture to internal memory).



**Save to file:** Copy the current photo (with theme) to "My Favorites." The photo will be resized to fit the T.photo's screen resolution and its theme will be saved as a new file in the internal memory for future access.

## ■ Slideshow Mode


This mode starts slideshow playback of all photos in the selected source. Slideshow mode will play based on the settings in the Options menu.



**Switching to Thumbnail mode:**

Press **OK** while viewing a slideshow to switch to **Thumbnail** mode.

## Options:

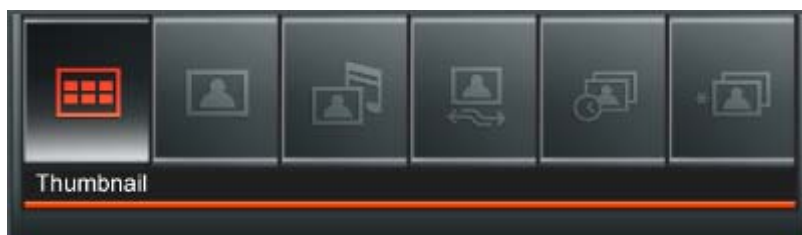

This menu shows list of options available in the **Slideshow** mode. Some of these options are available on the remote or by using the menu buttons on the front of the T.photo.

1. Press and use **LEFT** and **RIGHT** to highlight the desired menu option.
2. Press **OK** to access the highlighted function or open its sub-menu.
3. Press once to go back to the previous screen.
4. Press again to revert to the **Home** menu.



**Thumbnail:** Select this item or press on the remote to jump to Thumbnail mode.



**Photo View:** Select this item to switch to Photo View mode for zoom-in and other functions.



**Background Music:** Enable or disable background music while viewing photos.

- **On (Music):** Turn on mp3 music. The T.photo will automatically find and play music files on the same memory device that is being used to display photos. Playback settings (repeat, **EQ**, etc.) applied in MUSIC mode will be used. Use / on the remote to skip through available songs. If there are no music files on the current storage media, no music will be played.
- **On (Radio):** Turn on the FM radio. The T.photo will either use the saved radio station last listened to in RADIO mode or the first available FM frequency. Skip through saved stations by pressing / on the remote or press and *hold* / to manually scan for frequencies.
- **Off:** Turn off all background music



**Slideshow Order:** Change the order that photos are displayed in. In the Slideshow Order submenu, use the **LEFT** or **RIGHT** buttons to select Normal (continuous sequential playback) or Random (continuous random playback), and press **OK** to confirm.



**Slideshow Interval:** Adjust the amount of time each picture stays on the screen. In the Slideshow Interval submenu, use **LEFT** or **RIGHT** to highlight either: 5 sec, 10 sec, 30 sec, 1 min, 10 min or 30 min. Press **OK** to confirm.





**Slideshow Transition Effects:** Change the way the screen transitions between each photo. In the Transition Effects submenu, use the **LEFT** or **RIGHT** buttons to select the desired effect and press **OK** to confirm.



## Video |


The **Video** function is a convenient way to playback videos and movies on your T.photo. There are two Video modes: (**Video Explorer** and **Video Player**). You can use the remote control to access these modes directly or navigate to them using the OSD.

### ■ Video Explorer





Select Video from the Home menu or press  to enter this mode. The Video Explorer allows you to browse thumbnail previews (24 per page) of all video files on the current media source. Use the **UP**, **DOWN**, **LEFT** and **RIGHT** buttons to navigate to the thumbnail of the video you want to view. Press  to view the selected video in the full-screen **Video Player**.

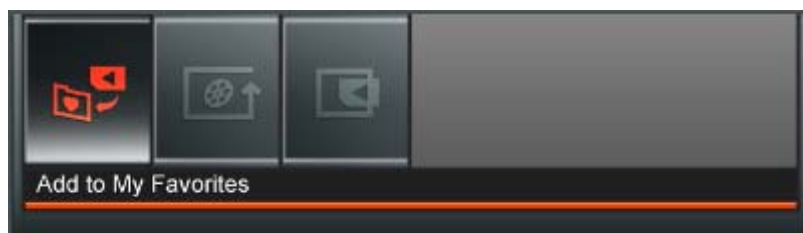


### Options:



This menu shows list of options available in the **Video** mode. Some of these options are available on the remote or by using the menu buttons on the front of the T.photo.

1. Press  and use **LEFT** and **RIGHT** to highlight the desired menu option.
2. Press  to access the highlighted function or open its sub-menu.
3. Press  once to go back to the previous screen.
4. Press  again to revert to the **Home** menu.



**Add to / Remove from My Favorites ():** Copy the currently selected video to the T.photo's internal memory (when the viewing source is a memory card or USB flash drive). To remove a photo from the internal memory, select "My Favorites" as the viewing source, navigate to the desired thumbnail to remove, and then choose "Remove from My Favorites."



**Repeat Mode:** Adjust the way T.photo plays your video files: Normal, Repeat one, Repeat all.

- **Normal** (plays once and returns to the Video Explorer)
- **Repeat One** (continuously replays the selected video)
- **Repeat All** (continuously replays all available video files on the current source media)



**Select Source:** Change the media source to browse videos from. Use **LEFT** and **RIGHT** to select one of the available storage devices and press **OK**.

## ■ Video Player




To start playing a video, press **▶||** or **OK** on a highlighted file in the Video Explorer.

1. Press **▶||** to pause and again to resume.
2. Adjust the volume by using the **Volume Control Wheel** on the left side of T.photo or by pressing **🔊** , **🔊** or **🔊** on the remote.
3. Press **⏮** to go back to the previous video and **⏭** to play the next available file.
4. Press **🔍** to open the **Video Explorer** and select another to play.
5. Press **MODE** on the remote to quickly switch between video repeat modes.

## MUSIC |


The **Music** mode has two ways to find and playback music files. You can individually skip through each available song, one-by-one in the **Music Player**, or you can browse folders on your storage media to find a specific song file to play. The Music mode also lets you set your favorite song as your alarm clock ringer.

### ■ Music Explorer

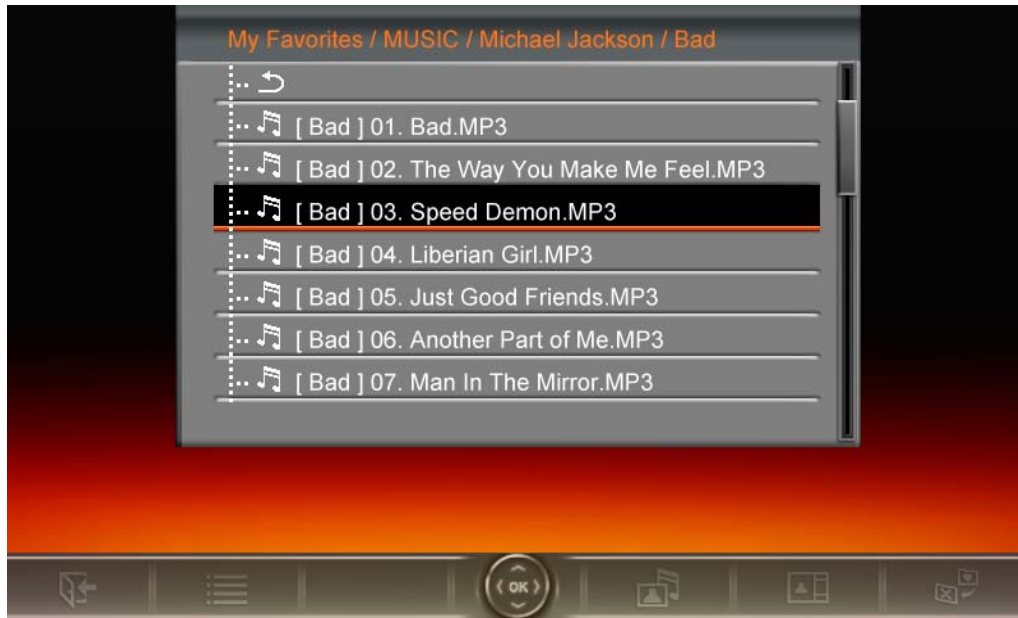

Choose "**Music**" from the Home menu or press to open the Music Explorer. The Music Explorer lets you browse for individual songs in specific folders. The directory path is shown at the top of the screen. In the Music Explorer you will see all file folders available on the current storage device. Use the **UP** and **DOWN** buttons to move to the desired folder. You can enter a folder by pressing **RIGHT** or , and exit or move up a level by pressing **LEFT** or selecting . Once you have located the music file you want to play, press or to start playing the song in Music Player. To go back to the Music Explorer and choose a different song, press the button.

### Options:

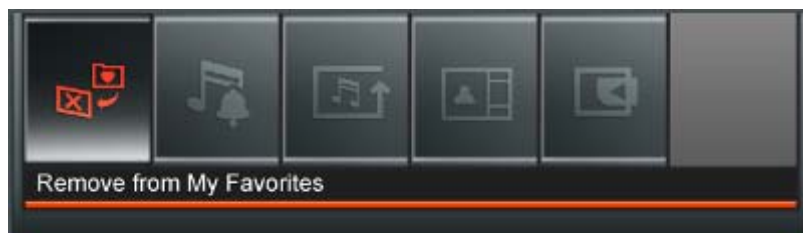

This menu shows list of options available in the **Music** mode. Some of these options are available on the remote or by using the menu buttons on the front of the T.photo.

1. Press and use **LEFT** and **RIGHT** to highlight the desired menu option.
2. Press to access the highlighted function or open its sub-menu.
3. Press once to go back to the previous screen.
4. Press again to revert to the **Home** menu.





**Add to / Remove from My Favorites (♥):** Copy the current highlighted music file from your storage media (Memory card or USB flash drive) to T.photo's internal memory. To delete songs from the internal memory, change the media source to "My Favorites" and select Remove from **My Favorites** from the Options menu.



**Set as Music Alarm:** Set the selected song as your alarm clock sound. To select the Music Alarm or other alarm sounds, go to "**Home > Settings > Alarm > Alarm sound.**"



**Repeat Mode (MODE):** Choose a repeat mode to playback multiple music files: Normal, Repeat one, Repeat all, Random, Normal in folder, Repeat in folder and Random in folder.



**Picture Display Mode:** Change the way pictures are displayed in the Music Player: "Background Image" (static photo) or "Slideshow," which will consecutively display all pictures on the currently selected media source. The background Image can be chosen in: "**Home > Photo View > Options > Set as Background Image.**"





















**Select source:** Select the media source to browse and play music from. Use **LEFT** and **RIGHT** to select one of the available storage devices and press **OK**.

## ■ Music Player

 The Music Player screen shows song information, the date, and the current time on the right-hand side of the screen, and displays a photo or slideshow of your choice on the left.



















	ICON	INDICATION
<b>A</b>	<b>Picture Display</b>	Displays either a single background image or a photo slideshow
<b>B</b>	<b>Date</b>	Displays today's date and day of the week
<b>C</b>	<b>Repeat Mode</b>	 Normal  Repeat One  Repeat All  Random  Normal in Folder  Repeat in Folder  Random in Folder
<b>C</b>	<b>Equalizer Mode</b>	 Normal  Jazz  Pop  Rock  Bass  Classical
<b>D</b>	<b>Album / Artist / Song</b>	Displays album title, artist name, and song title (respectively)
<b>E</b>	<b>Track Time &amp; Progress Bar</b>	Indicates the track length and current position
<b>F</b>	<b>Play Status</b>	 Play  Pause  Stop  Rewind  Fast-Forward
<b>G</b>	<b>AM / PM &amp; Alarm on / off</b>	Displays AM or PM (when 12H time format is enabled). And display a alarm icon while alarm on.
<b>H</b>	<b>Time</b>	Displays the current time

To start playing music, press  or  on a highlighted song in the Music Explorer.

The **Music Player** functions are familiar and easy - just like any other player:

1. Press  to play music and again to pause.
2. Press  to stop the music.
3. Adjust the music volume by using the **Volume Control Wheel** on the left side of T.photo or by pressing  or  on the remote.
4. Press  to go back to the previous track and  to play the next song available.
5. To fast-forward to your favorite section of the current song press and hold . To rewind, press and hold .
6. Press  to switch between available Equalizer modes.
7. Press  on the remote or the  button to quickly switch between music Repeat modes.
8. Press  to open the **Music Explorer** and select folders or songs to play. Music will keep playing unless you press  to stop the music.

## Radio |

By selecting the Radio option or pressing , you can listen to your favorite radio stations from the built-in FM tuner and browse your photos at the same time. The Radio mode also lets you set your favorite station as your alarm clock ringer.



	ICON	INDICATION
<b>A</b>	<b>Picture Display</b>	Displays either a single background image or a photo slideshow
<b>B</b>	<b>Date</b>	Displays today's date and day of the week
<b>C</b>	<b>Stereo Icon</b>	Indicates reception of a strong FM stereo station
<b>D</b>	<b>Frequency</b>	Displays the currently selected FM radio frequency
<b>E</b>	<b>Saved Stations</b>	Displays all saved stations, and highlights currently selected channel
<b>F/G</b>	<b>Station / Frequency</b>	Lights up when switching between station presets or manually adjusting the frequency
<b>H</b>	<b>AM / PM &amp; Alarm on / off</b>	Displays AM or PM (when 12H time format is enabled). And display a alarm icon while alarm on.
<b>I</b>	<b>Time</b>	Displays the current time

### Selecting a Radio Station:

There are two ways to change stations: You can adjust the frequency manually from the Radio screen or you can choose one of the **preset stations** in "Saved Stations" list.


### To adjust the frequency manually:

1. In Radio mode, press the **LEFT** or **RIGHT** buttons (the FM frequency will increase or decrease in 0.1MHz increments) until you reach the desired frequency.
2. You can also press and *hold* either **LEFT** or **RIGHT** to auto-scan for the next available station.





#### To select a preset station:

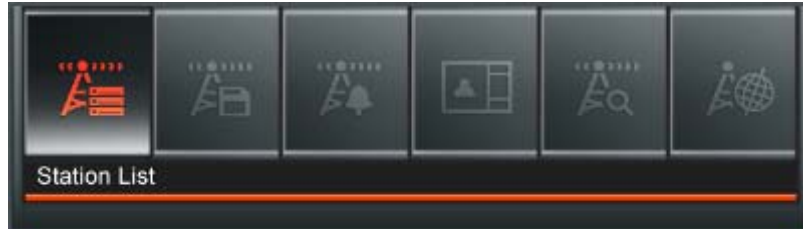1. In Radio mode, press **DOWN** to skip forward to the next saved station in the station list.
2. Press **UP** to go back to the previous saved station in your station list.

#### Options:



This menu shows list of options available in the **Radio** mode. Some of these options are available on the remote or by using the menu buttons on the front of the T.photo.



1. Press  and use **LEFT** and **RIGHT** to highlight the desired menu option.
2. Press  to access the highlighted function or open its sub-menu.
3. Press  once to go back to the previous screen.
4. Press  again to revert to the Home menu.




**Auto Scan:** Automatically scan all FM frequencies and save the first 20 stations with strong signals to the Station List. **Note:** performing an Auto Scan will reset all previously saved stations in the **Station List**.



**Save Station:** This option lets you save your 20 favorite radio stations from in the T.photo's memory.

1. Select the radio station (FM frequency) that you wish to save.
2. Highlight **Save Station** in the Options menu and press .
3. A list of station presets from "Station 01" ~ "Station 20" will appear.
4. Use the **UP** / **DOWN** buttons to highlight one of the 20 station presets and press  to save the current FM frequency to that preset station number.

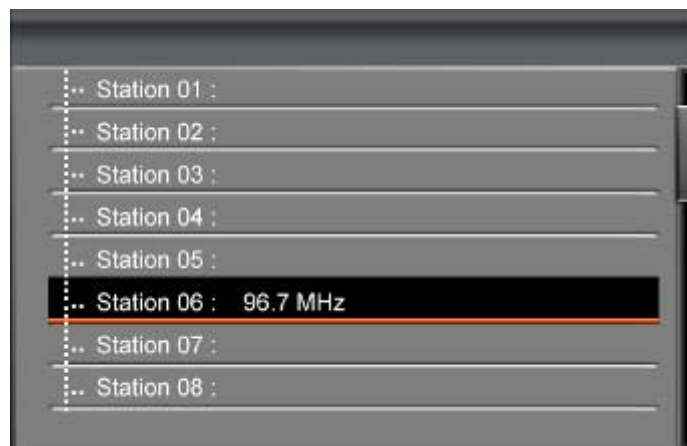

5. Your new saved station will now be highlighted in the Radio screen's list of saved stations.



**Station List:** This option displays a list of all 20 preset stations and their frequencies. Use the **UP** / **DOWN** buttons to navigate to the station that you want to listen to and press **OK**. Note: you must first use **Auto Scan** or **Save Station** to add stations to this list.



**Set as Radio Alarm:** Set current radio frequency as your alarm clock sound. Radio alarm can be chosen in “**Home > Settings > Alarm > Alarm sound.**”





**Picture Display Mode:** Change the way pictures are displayed in **Radio** mode: “Background Image” (static photo) or “Slideshow,” which will consecutively display all pictures on the currently selected media source. The background Image can be chosen in: “**Home > Photo View > Options > Set as Background Image.**”



**FM Region:** Change the FM broadcast frequency band. If you live in the Japan region, set the FM Region to “Japan.” For all other countries (87.5 MHz – 108.0 MHz), “World” should be used.

## ■ Adjusting the Volume:


1. Locate the **Volume Control Wheel** on the upper-left side of the T.photo
2. Gently rock the wheel up or down with your thumb or fingertip to increase or decrease volume.
3. Alternatively, press  or  on the remote until you reach a comfortable volume level.

**Note:**


- To improve FM reception, extend the FM antenna wire to its full length and point it in the direction that gives the strongest signal. Signal strength may also depend on the location of your home.
- We recommend performing an **Auto Scan** the first time you use the Radio, and then adjusting the Saved Stations list to your preference.

## Calendar |



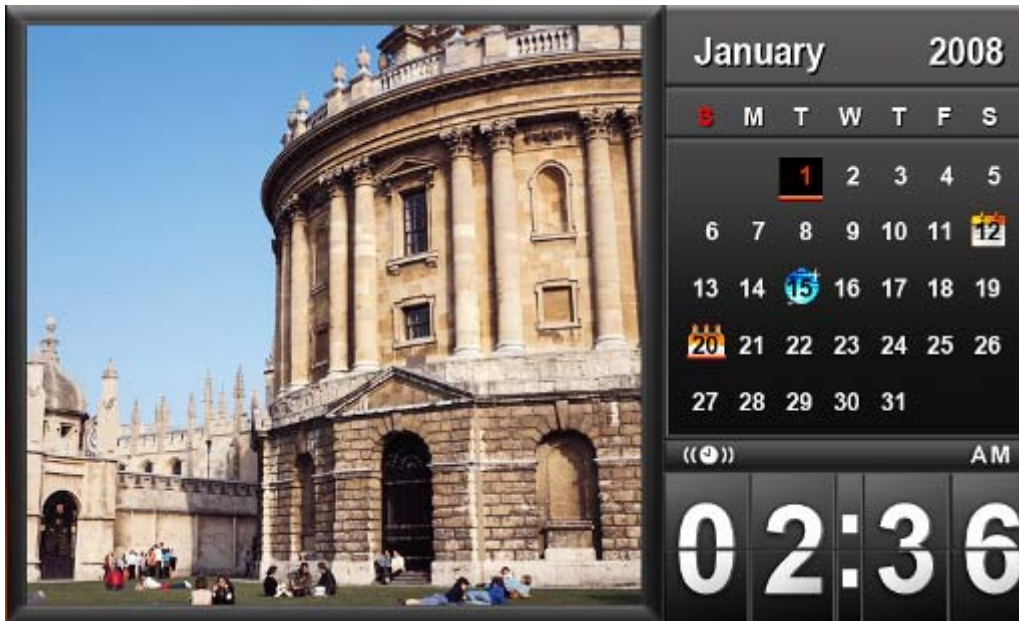

In the Calendar mode, your T.photo becomes an attractive desktop calendar and clock that lets you set important date reminders and display your favorite photos, too. The Calendar mode displays a monthly calendar and digital clock on the right-hand side of the screen and a selected photo or slideshow on the left. Press **UP** or **DOWN** to switch to the previous or next month.

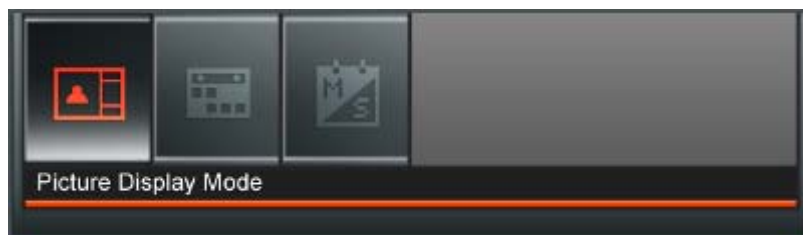

### Options:





This menu shows list of options available in the **Calendar** mode. Some of these options are available on the remote or by using the menu buttons on the front of the T.photo.

1. Press  and use **LEFT** and **RIGHT** to highlight the desired menu option.
2. Press  to access the highlighted function or open its sub-menu.
3. Press  once to go back to the previous screen.
4. Press  again to revert to the **Home** menu



**Important Dates:** You can earmark your important dates on the calendar screen. Follow the steps below to highlight important dates on the calendar:

1. Select **Important Dates** from the Options menu.
2. Press **UP** and **DOWN** to select a different month or year.
3. Move the cursor on the desired date and press  to mark that day.
4. Four mark types are available and are represented by different colors: None, Birthday, Party, and Date. Choose one and press  to confirm.



**Picture Display Mode:** Change the way pictures are displayed in the Clock and Calendar mode: “Background Image” (static photo) or “Slideshow,” which will consecutively display all pictures on the currently selected media source. The background Image can be chosen in: “**Home > Photo View > Options > Set as Background Image.**”







**First Day of the Week:** Set the calendar to display either “Sunday” or “Monday” as the first day of the week.



## Settings |


In the **Settings** menu, you can inspect your T.photo's current device status – Product name, Firmware version, and free space of My Favorites (onboard memory). You can also adjust T.photo's interface settings like setting the clock and changing languages.



1. Select the “Settings” icon from the Home menu or press  on the remote.
2. Use **LEFT** and **RIGHT** to highlight the desired menu option.
3. Press  to access the highlighted function or open its sub-menu.
4. Press  once to go back to the previous screen.
5. Press  again to revert to the **Home** menu.

### Language

Use this function to change the interface language of T.photo (13 languages are currently available). The default language is “English.” To change the Language:

1. Select the **Language** option from the Settings menu.
2. Use **LEFT** or **RIGHT** to highlight the desired language.
3. Press  to confirm the new language setting. The new setting will be applied immediately.






## Alarm

The alarm function lets you use your T.photo like a clock radio – you can even wake up to your favorite MP3 song or radio station in the morning.



1. Select **Alarm** from the Settings menu, and use the **UP** or **DOWN** buttons to select between *alarm on/off*, *alarm time*, *alarm sound*, *alarm volume* and *sleep timer*.
2. Press **OK** to modify the selected item (except Alarm Volume).
  - **Alarm On/Off:** Press **UP** or **DOWN** to enable (on) or *disable* (off) the alarm.
  - **Alarm Time:** Press **LEFT** or **RIGHT** to switch between *hour* and *minute*, and **UP** or **DOWN** to adjust the value. NOTE: “24H” or “AM/PM” can be changed in “**Home > Settings > Date/Time-> 12H/24H**”
  - **Alarm Sound:** Press **UP** or **DOWN** to select from a choice of five default alarm sounds or your own personalized “Music Alarm” or “Radio Alarm” (can be any song or radio station you want). The “Music Alarm” sound can be chosen in: **Home > Music > Options > Set as Music Alarm** and the “Radio Alarm” sound can be chosen in: **Home > Radio > Options > Set as Radio Alarm**.
  - **Alarm Volume:** Press **UP** or **DOWN** to adjust the alarm volume.
  - **Sleep Timer:** Press **UP** / **DOWN** to enable a sleep timer to shutdown the T.photo after a specified amount of time. Available options are: 15 / 30 / 45 / 60 / 90 / 120 *minutes* and *Disable*. You can also enable the sleep timer by pressing  on the remote. When the specified time is about to expire, a “Press [SLEEP] button on remote to disable” message will appear. **NOTE:** To set T.photo to turn on or off automatically on a daily basis, please use the “Auto-ON/OFF” feature in: **Home > Settings > Date / Time > Auto ON/OFF**
3. After making adjustments, press **OK** to save.



## Date / Time

This option lets you adjust the current date and time and set your T.photo to automatically turn on and off every day at a specific time. The Auto-ON/OFF timer is a convenient way to save power at night.




1. Select **Date/Time** from the Settings menu, and use the **UP** or **DOWN** buttons to select between *date*, *time*, *12H/24H*, *auto-on*, *auto-off* or *auto-on/off timer*.
2. Press **OK** to modify the selected item.
  - **Current Date**: Press **LEFT** or **RIGHT** to select between *year month* or *day*, and press **UP** / **DOWN** to adjust the value.
  - **Current Time**: Press **LEFT** or **RIGHT** to select *hour* or *minute* and **UP** / **DOWN** to adjust the value.
  - **12H / 24H**: Press **UP** or **DOWN** to switch between *12-Hour* (AM/PM) and *24-Hour* clock display. This setting affects all time displayed in T.photo (alarm, system time, auto-on/off).
  - **Auto On at**: Set a daily auto power-on time. Press **LEFT** or **RIGHT** to select *hour* or *minute* and **UP** or **DOWN** to adjust the value.
  - **Auto Off at**: Set a daily auto power-off time. Press **LEFT** or **RIGHT** to select *hour* or *minute* and **UP** or **DOWN** to adjust the value.
  - **Auto On/Off timer**: Press **UP** or **DOWN** to *enable* or *disable* the auto power on/off function.
3. After making adjustments, press **OK** to save.



## Display

This menu lets you change the way photos are displayed on the T.photo's screen.



1. Select **Display** from the Settings menu to open the Display settings menu, and use the **UP** and **DOWN** buttons to highlight “brightness”, “contrast” , “fullscreen” and “orientation.”
2. Press **OK** to modify the selected item (Brightness and Contrast changes take effect immediately)
3. After making your adjustments, press **OK** to save.
  - **Brightness:** press **LEFT** / **RIGHT** or  on the remote to fine-tune the brightness of the screen.
  - **Contrast:** Press **LEFT** or **RIGHT** to make adjustments to the screen's contrast.
  - **Fullscreen:** Press **UP** or **DOWN** to *enable* or *disable*. If disabled, T.photo will preserve the original dimensions of the image on the screen. If enabled, T.photo will enlarge the photo to fit the screen, while preserving its original aspect ratio. Depending on its dimensions, some parts of the photo may not be displayed in fullscreen mode. Note: fullscreen is only applied on horizontal photos displayed in landscape orientation or vertical photos displayed in portrait orientation.



Fullscreen disabled













Fullscreen enabled

- **Optimize My Favorites Image Size:** When this option is enabled, the “Add to My Favorites” function will resize all photos to the T.photo's native 800x480 resolution to maximize storage space.

## NOTE:

The T.photo always preserves the *original aspect ratio* of all images based on each picture file's orientation information (EXIF), and NEVER stretches them to fill the entire screen. An easy, distortion-free way to remove the black bars from the top/bottom or sides of an image is to use the Fullscreen option mentioned above, or the **Zoom** function. The way photos are displayed depends on the T.photo's orientation (see graph below)

Detected Photo Type (EXIF)	Horizontal		Vertical	
Fullscreen Mode T.photo Orientation	Disabled	Enabled	Disabled	Enabled
<b>Landscape (A)</b> 				
<b>Portrait (B)</b> 				



## Restore Defaults

This function is available if you want to reset your T.photo's settings. Note: All settings that have been changed will return to the factory defaults.

1. Select **Restore defaults** from the Settings menu.
2. Use **LEFT** or **RIGHT** to highlight "Yes."
3. Press **OK** to confirm.
4. After the process is finished, the Settings menu will be displayed again.



## Upgrade Firmware

Use this function to keep your T.photo up to date with the latest version from Transcend (available on the Transcend website).

1. Insert a storage device such as a USB flash drive or SD/SDHC/MMC/MS/CF memory card that contains a newer version of firmware.
2. Select **Firmware upgrade** from the Settings menu and press **OK** to start the firmware detection process. T.photo will automatically find the new firmware file.
3. If T.photo finds that a newer version of firmware is available, a "Yes / No" selection message will be shown. Use **LEFT** or **RIGHT** to select "Yes" and press **OK** to perform the system upgrade. If you do not want to upgrade, press "No" to return to the Settings menu.



**Note: NEVER remove the power cord or any storage devices while the firmware is being upgraded.** If firmware upgrade fails and the T.photo will not turn on, please T.photo contact Transcend customer support.

## Troubleshooting |

If a problem occurs with your T.photo please first check the information listed below before sending your T.photo in for repair. If you are unable to remedy a problem from the following hints, please consult your dealer, service center, or local Transcend branch office. We also have FAQ and Support services on our websites. For any Hardware issues please consult the T.photo User's Manual.

### ■ **I cannot turn my Transcend T.photo on**

You may not be holding down the Power button long enough. Please press and hold the Power button for at least 2 seconds. If that doesn't solve the problem, please check to make sure your T.photo is connected securely to the DC adapter, and that the adapter is plugged into a wall socket.

### ■ **My computer's operating system cannot detect my T.photo**

Check the following:

1. Is your T.photo properly connected to the USB port? If not, unplug it and plug it in again. Make sure the USB port is connected on both ends, as shown in the User's Manual.
2. Is your T.photo connected to the Mac keyboard? If yes, unplug it and plug it into an available USB port on your Mac Desktop.
3. Is the USB port enabled? If not, refer to the user's manual of your computer (or motherboard) to enable it.

### ■ **I was using my T.photo, now no buttons are responding (hangs/lags/stalls)**

Try unplugging the DC adapter from your T.photo, then reconnecting it to your T.photo again.

### ■ **I have connected my T.photo to the computer, but the T.photo does not appear as a new drive in my operating system?**

Verify the DC adapter is connected to your T.photo and that the T.photo power is turned on. If not, turn it on and then connect the T.photo to the computer again. Please make sure your operating system meets the Transcend T.photo system requirements described in the "Introduction" section.

### ■ **My T.photo cannot read photos on my memory card or the built-in memory**

1. Make sure the T.photo supports the memory card type (CF/SD/MMC/MS).
2. Ensure that the memory card is correctly inserted all the way into its appropriate slot.
3. Edited and deformed photos may not display properly on T.photo. Some digital cameras save images into non-standard formats - please check your camera's user manual for specifics.

### ■ **How can I display video files on my T.photo?**

The T.photo only displays certain video formats. Please see the T.photo FAQ on the Transcend website for instructions how to encode your video files to the T.photo's format.

### ■ **Can I delete files on my USB flash drive or memory card with the T.photo?**

The T.photo cannot directly delete any files on a USB flash drive or memory card. However, you can connect the T.photo to a computer and use the computer to delete files on memory devices that are plugged-in to the T.photo.

### ■ **Why does the time and date reset after unplugging the DC adapter?**

If you unplug the T.photo for a long time, its internal backup battery will eventually drain. Typically, the T.photo can keep your time and date for about 2~3 days after unplugging the DC power adapter.

## Specifications |

<b>Panel:</b>	7" TFT LCD, 800x480 pixels
<b>Speakers:</b>	L / R stereo speakers, 1.5w each
<b>Headphone Jack:</b>	3.5mm, 32 ohm
<b>FM Jack</b>	2.5mm
<b>USB Interface:</b>	1x standard A-Type, 1x mini B-Type
<b>Internal Storage:</b>	2GB NAND Flash
<b>Data Retention:</b>	Up to 10 years
<b>Navigation:</b>	5-way navigation button, 6 menu buttons, volume control wheel, remote control
<b>Remote Control:</b>	Infrared, NEC protocol
<b>Dimensions:</b>	195mm x 157mm x 25mm
<b>Power Supply:</b>	Input: 100 ~ 240 V 0.3A, Output: 5V DC 2.0A
<b>Picture Formats:</b>	DSC JPEG (up to 8000 x 8000), BMP (800 x 600), AVI, MOV, MPG, MP4, 3GP
<b>Video Formats:</b>	(Up to 720x576 @ 30FPS) Motion JPEG (Up to 640x480 @ 30FPS)
<b>Music Formats:</b>	MP3, WMA (Non-DRM), WAV
<b>Supported Music Bit Rates:</b>	32Kbps–320Kbps
<b>FM Frequency Range</b>	World: 87.5 ~ 108.0 MHz Japan: 76 ~ 90 MHz
<b>Certificates:</b>	CE, FCC, BSMI
<b>Warranty:</b>	Panel: 1-year, (maximum 4 defective pixels) Device: 2-years

## Ordering Information |

<i>Device Description</i>	<i>Memory Size</i>	<i>Transcend P/N</i>
T.photo 720 Digital Photo Frame - Black	2GB	TS2GPF720K
T.photo 720 Digital Photo Frame – Black (EU Version)	2GB	TS2GPF720K-EU
T.photo 720 Digital Photo Frame - White	2GB	TS2GPF720W
T.photo 720 Digital Photo Frame – White (EU Version)	2GB	TS2GPF720W-EU

## Transcend Limited Warranty |

**“Above and Beyond” is the standard we set ourselves for customer service at Transcend. We consistently position ourselves to be significantly above the industry norm, which is all part of our commitment to Customer Satisfaction.**

All **Transcend information, Inc. (Transcend)** products are warranted and tested to be free from defects in material and workmanship and to conform to the published specifications. During the warranty period should your Transcend T.photo fail under normal use in the recommended environment due to improper workmanship or materials, Transcend will repair the product or replace it with a comparable one. This warranty is subject to the conditions and limitations set forth herein.

**Warranty Period:** The Transcend T.photo warranty period is two years from the date of purchase (One-year screen warranty: Within one year of the purchase date, Transcend will replace or repair T.photo screens with four or more defective pixels). Transcend reserves the right to determine whether repair or replacement is suitable upon inspection of the product. The decision made by Transcend whether to repair or replace the product will be final. Additionally, Transcend reserves the right to provide a functionally equivalent refurbished replacement product.

**Limitations:** This warranty does not apply to product failure caused by accidents, abuse, mishandling, improper installation, alteration, acts of nature, improper usage, or problems with electrical power. In addition, opening or tampering with the product casing, or any physical damage, abuse or alteration to the product's surface, including all warranty or quality stickers, product serial or electronic numbers will also void the product warranty. This warranty only applies to the product itself, and excludes all product accessories, including, but not limited to: card adapters, cables, earphones, power adapters, and remote controls, which must be exchanged within seven days of the purchase date if defective. Transcend is not responsible for recovering any data lost due to the failure of a hard drive device. Transcend's T.photo must be used with devices that conform to the recommended industry standards. Transcend will not be liable for damages resulting from a third party device that causes the Transcend T.photo to fail. Transcend shall in no event be liable for any consequential, indirect, or incidental damages, lost profits, lost business investments, lost goodwill, or interference with business relationships as a result of lost data. Transcend is also not responsible for damage or failure of any third party equipment, even if Transcend has been advised of the possibility.

**Disclaimer:** The foregoing limited warranty is exclusive. There are no other warranties, including any implied warranty of merchantability or fitness for a particular purpose. This warranty is not affected in any part by Transcend providing technical support or advice. Please read Transcend's Warranty Policy in full to understand your rights.

**Transcend Warranty Policy:** <http://www.transcendusa.com/Support/Warranty.asp>

**Online Registration:** To expedite the warranty service, please register your Transcend Product within 30 days of purchase.

**Register online at** <http://www.transcendusa.com/productregister>

❖ The specifications mentioned above are subject to change without notice.



***Transcend Information, Inc.***

[www.transcendusa.com](http://www.transcendusa.com)

\*The Transcend logo is a registered trademark of Transcend Information, Inc.

\*All logos and marks are trademarks of their respective companies.